


Wire access details for prewiring security alarm in Showcase windows. This is to help prevent water penetration into the home.


1. Drill through the side of jamb for wire access. Drill this hole just below the level of the sill cover.

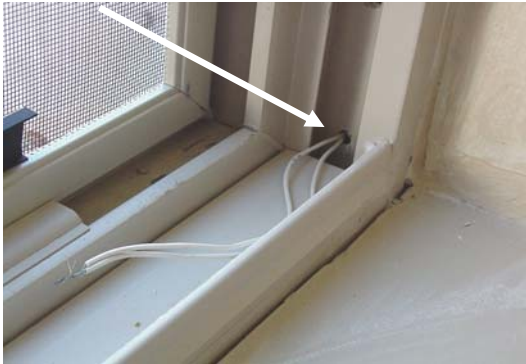

2. Drill 3/8" hole for contact insertion & wire access. Only drill through this top cover and not through the bottom of the window.



3. Drill 3/8" hole, slowly, in the bottom of the operable sash for the magnet. You will go through 2 levels of vinyl.

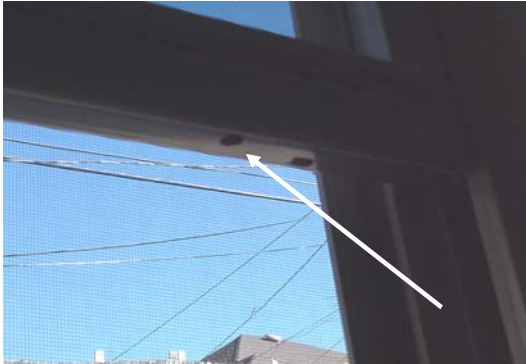


4. Push wires for contact through the sill cover hole and feed to side for connection to wires in jamb.



5. Splice the wires and insert the contact. Conceal wires under the sill cover. At "A" silicone the entrance hole through the side jamb to prevent water penetration into the house.



6. Insert magnet in the bottom of the sash.

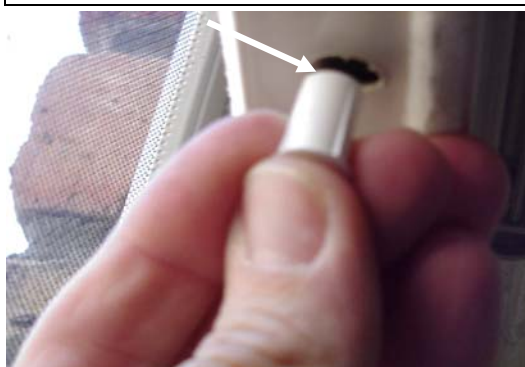

The Showcase Custom Vinyl Windows 200 series SH and the 800 series DH are made to weep water back to the exterior of the window. If a hole is drilled through the bottom of the window, water will find it's way to the interior of the structure. Please use these installation instructions to help prevent water penetration into the home. These are not the only preventative measures needed to make sure water does not penetrate at the window opening. Proper flashing, window wraps and caulking are needed to prevent water penetration.